



TV/FM Indoor Antenna

 
 
OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack TV/FM Indoor Antenna helps improve your TV's VHF (channels 2–13) and UHF (channels 14–69) reception, or your home stereo system's FM reception.

Its features include:


Rotating VHF/FM Dipoles and UHF Reflector — improve reception without moving the antenna console

Twelve-Position Fine-Tune Control — allows precise tuning to help eliminate ghosting, picture graininess, and static.




RadioShack®
www.radioshack.com™

 © 2000 RadioShack Corporation.
All Rights Reserved.
RadioShack and RadioShack.com
are trademarks used
by RadioShack Corporation.



INSTALLATION

 1. Place the antenna on or near your TV.
2. Connect the supplied coaxial cable to the antenna's 75-ohm connector, then to the TV's 75-ohm VHF connector.

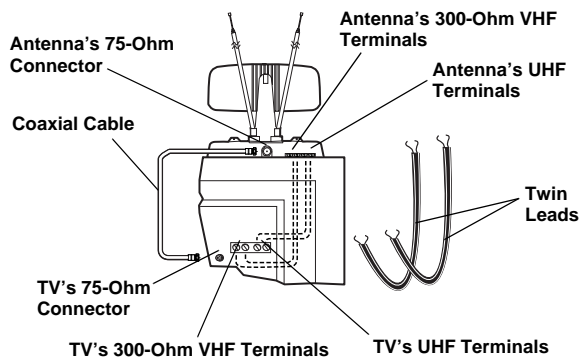


If your TV does not have a 75-ohm connector, connect twin leads (not supplied) to the antenna's 300-ohm VHF terminals and the TV's VHF terminals.

Connect the twin leads between the antenna's UHF terminals and the TV's UHF terminals.

OPERATION

 Extend the telescoping elements to full length and move them to an angle that produces the best reception. Hold the elements at their bases while adjusting.

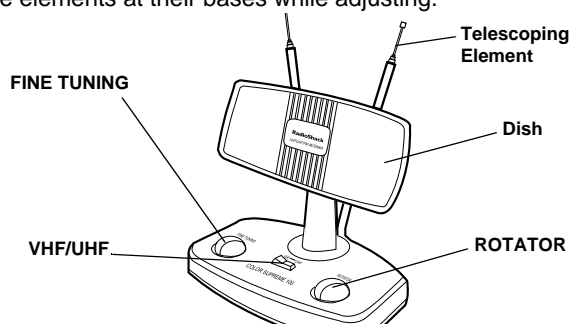

*For VHF TV Channels 2–13 and FM radio stations, set **VHF/UHF** to **VHF**. Gradually turn **ROTATOR** while trying different settings of **FINE TUNING** until you get the best picture (or sound, if using the antenna with a stereo).*

*For UHF TV Channels 14–83, set **VHF/UHF** to **UHF**. Gradually turn **ROTATOR** and tilt the dish back and forth until you get the best picture. **FINE TUNING** does not affect UHF signals.*

Important: In weak-signal areas you might get slightly better reception by moving the telescoping elements.



For channels 7–13 and FM radio, shorten the telescoping elements slightly. For all VHF channels, adjust the angle of the telescoping elements.



Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99



RadioShack Corporation
Fort Worth, Texas 76102

15-1825
10/00
Printed in USA

